

## **IMPORTANT NOTICE OF PROCEDURAL CHANGE FOR REFUGE CHAMBERS**

Due to revised advice from the manufacturer MineARC has modified the procedure on activation of the **Oxygen Candle** supplied inside the refuge chambers.

MineARC's *Photographic Operational Procedure Manual* previously stated to remove the candle striker after ignition.

Although slight, there is a decrease in efficiency of the output of the candle if the striker is removed. Leaving the striker in place after ignition also ensures the spent ignition cartridge will not work its way out during the operational cycle of the candle.

**With this in mind it has been decided to leave the candle striker in place after the candle has been ignited.**

Attached are updated pages to replace the existing pages of your *Photographic Operational Procedure Manual*. Step 15 of the operating procedures summary sticker, located inside the chamber, should be obscured or removed.

These pages should be exchanged on site as soon as is practicably possible.

Any enquiries in regards to this matter may be directed to MineARC by **phone: (08) 9333 4966** or **email: info@minearc.com.au**

**Thank You.**